
Aspen Dining Chair

Disassembly Instructions


One person is sufficient for safe disassembly or assembly.




Follow steps 1-12 to disassemble the Aspen Dining Chair. To reassemble follow steps in reverse order. **Please note:** These disassembly instructions apply to the 'back rest' and 'seat' components only to enable reupholstering if desired. The disassembly instructions do NOT apply to the timber frame: **The Aspen chair's timber frame is NOT designed to be disassembled.**

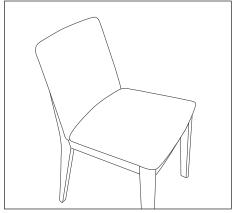


1 An Aspen chair (assembled).

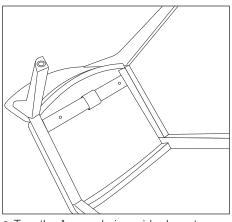


2 Turn the Aspen chair upside down to begin disassembly.

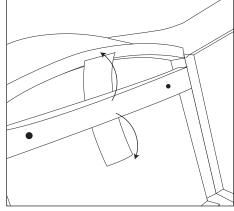


3 Unfasten the Velcro wrapped around the timber frame.

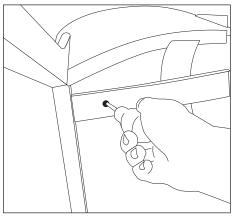


4 There is a screw on either side of the frame which helps secure the seat to the frame. Remove the screws and reserve them for reassembly.

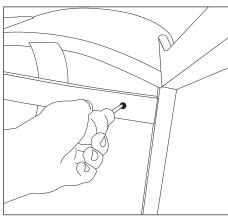


5 Once the screws have been removed follow steps 6-8 to continue separating the seat from the chair frame.

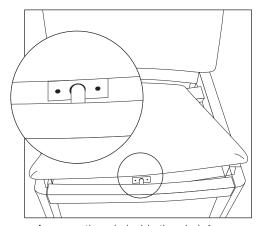


6 A connecting pin inside the chair frame fits into a hole in front of the seat frame securing the two components. Follow steps 7-8 to separate.

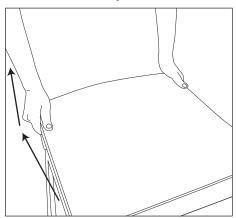


7 Pull the seat backwards firmly and then lift rear of seat upwards to separate the pin from the hole.

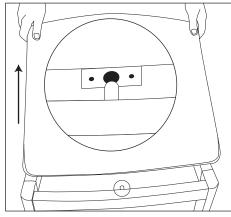


8 Continue pulling upwards until the pin has separated completely from the hole.

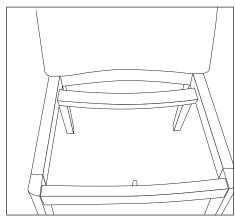


9 Once the seat has been successfully separated from the frame you can begin steps 10-13 to remove the back rest.

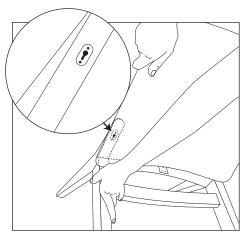

10 Behind the back rest two protruding screws fit into grooves in the chair frame. Hold the frame and pull the back rest upwards to release first screw.

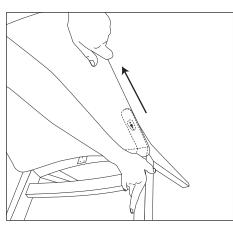

11 Repeat on the other side.

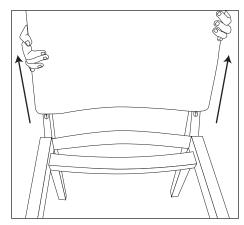

12 When both screws have been released from the grooves, the back rest may be lifted clean away from the chair frame.



13 Disassembly is now complete.

The Aspen's timber frame should not be dismantled - it is NOT designed to be disassembled.